


Crane

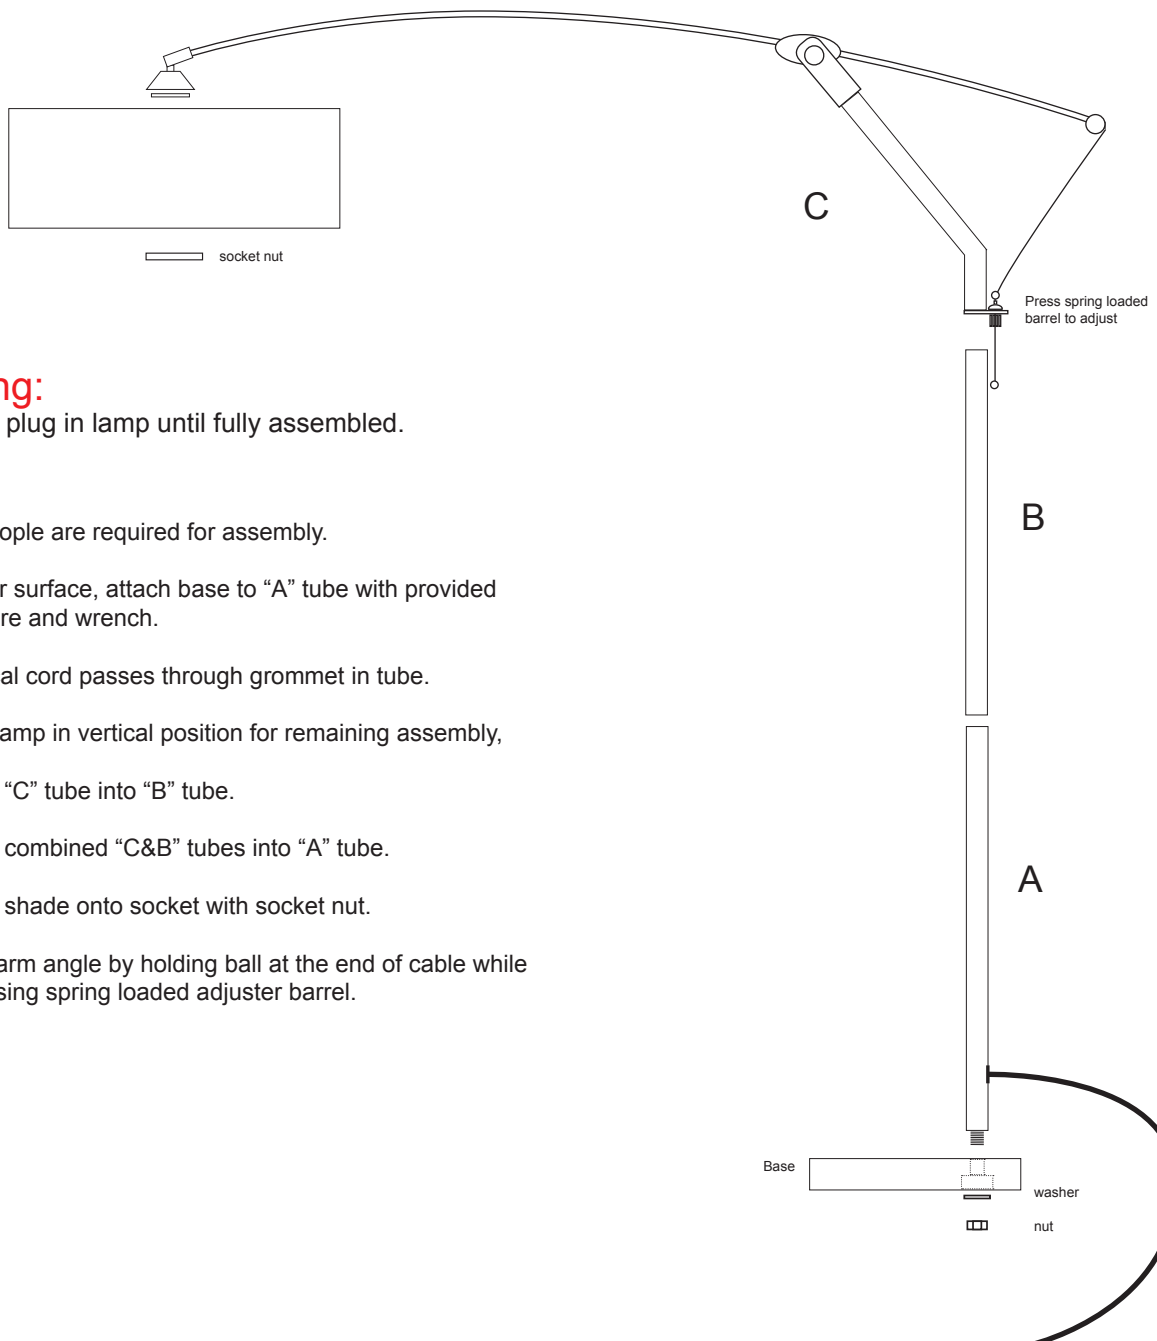

Wiring:

Do not plug in lamp until fully assembled.

Two people are required for assembly.

On floor surface, attach base to "A" tube with provided hardware and wrench.

Electrical cord passes through grommet in tube.

Orient lamp in vertical position for remaining assembly,

Thread "C" tube into "B" tube.

Thread combined "C&B" tubes into "A" tube.

Secure shade onto socket with socket nut.

Adjust arm angle by holding ball at the end of cable while depressing spring loaded adjuster barrel.